
LSO-SPO-world internet → LSO-IEP/LSO-world internet

1. switch off and unplug the LSO-SPO internet line UPS in the LSO dome (gray plastic box on the wall)
2. plug the power adapter of the LSO-IEP/LSO FO/TP switch in the AISAS server room (back wall plate – left bottom corner)

All other cables and the LSO-IEP/LSO FO/TP switch in the IEP rack should be plugged/on.

Warning: please, follow strictly this order of actions !

LSO-IEP/LSO-world internet → LSO-SPO-world internet

1. unplug the power adapter of the LSO-IEP/LSO FO/TP switch in the AISAS server room (back wall plate – left bottom corner)
2. plug and switch on the LSO-SPO internet line UPS in the LSO dome (gray plastic box on the wall)

All other cables and the LSO-IEP/LSO FO/TP switch in the IEP rack should be plugged/on.

Warning: please, follow strictly this order of actions !

the power adapter of the LSO-IEP/LSO FO/TP switch

the LSO-SPO internet line UPS